



Usage Instructions

1. **COLD & ROOM WATER Dispensing:**
 - o Standard: Press & Hold COLD / ROOM button – Release to stop
 - o Continual: Press ‘Non-Stop Supply’ once and press COLD / ROOM button once to dispense – Press COLD / ROOM button again to stop dispensing.
2. **HOT WATER Dispensing:**
 - o Standard: Press Safety Lock once then Press & Hold HOT button – Release to stop
 - o Continual: Press ‘Non-Stop Supply’ and Safety Lock once then Press HOT button – Press HOT button again to stop dispensing.
3. **Temperature Indicator:**
 - o Cycles through HOT, ROOM, COLD temperature
4. **Reboil Function:**
 - o Allows you to manually initiate re-boiling of water if HOT WATER is below desired temperature
 - o NOTE: System will automatically re-boil water when below 75 degrees – constant use of the manual Reboil function may use up more electricity and shorten the life of your dispenser.

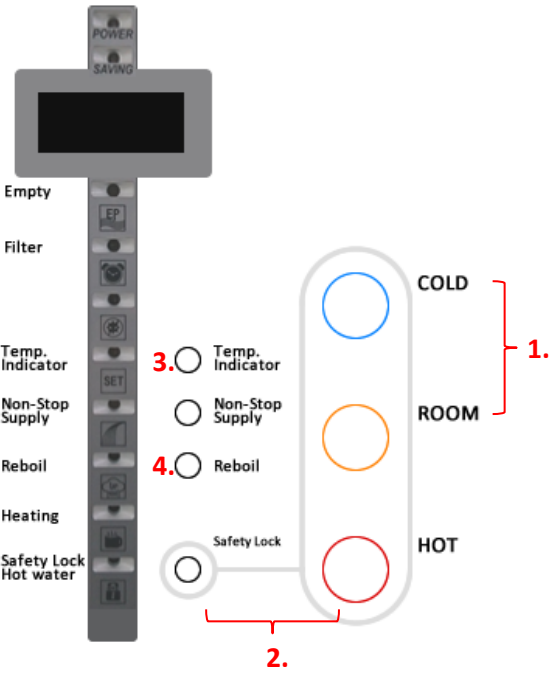

Dimensions

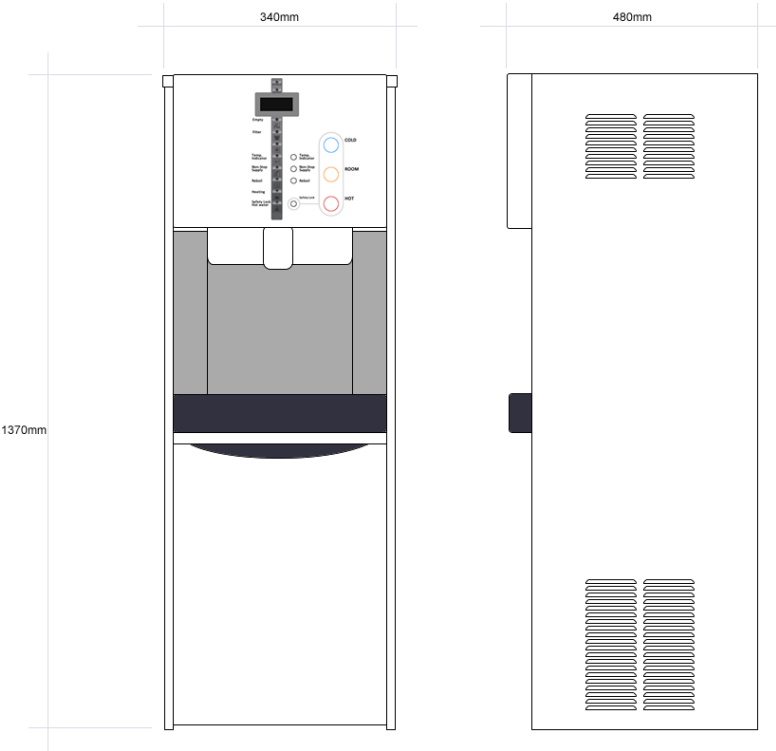

Technical Specification

Description	CLIMA Grande
Recommended Serving PAX	50-75
Temperature	75 °c ~ 100 °c
Tank Capacity	15L (HOT) 10L (ROOM) 4L (COLD)
Unit Height (mm)	1370
Unit Width (mm)	340
Unit Depth (mm)	480
Electrical Specifications	AC200 – 240V: 50 – 60Hz Heating Power: 800W (300W at 'keep warm' energy-saving mode) Cooling Power: 210W
Weight	40kg
Origin	Taiwan

Support & General Maintenance

Cleaning Instructions Dispenser:

Use a damp cloth to wipe the surfaces – Do not use cleaning agents that may cause discolouration and corrosion to the plated surfaces.

Troubleshooting

Leakage:

In the unlikely event of leakage, turn off the power supply and water valve supplying water to the modules and contact our Technical Support.

Error Messages:

EP = Water Shortage – Too much water drawn at one time OR water supply is disrupted (Check water supply)

AO = Water Leakage – Possible Internal leaking (Turn off water supply and call Technical Support)

EA = Water Supply regulator Failure – May result in overflow (Turn off water supply and call Technical Support)